

**FLASH RGB 400**

**USER GUIDE**

## **Service and repair**

The Laser Show equipment has no major serviceable parts. Repair of electronic- components (transistors, IC's) or changing other parts are not allowed by untrained persons. If there is a problem with the Laser Show equipment, your local service engineer will help you with repair or replacement. We recommend shipping the Laser Show equipment to the manufacturer for reparation.

## **Attachments:**

1. Laser Light:	1PCS
2. Power Cable:	1PCS
3. User Guide:	1PCS
4. Remote	1PCS

## **WARNINGS**

- Visible and invisible laser-light, direct beam can damage the human eye and the eyes of animals. Do not look at any Laser light directly.
- Do not touch the laser aperture with the hand. When cleaning the laser aperture, please use a soft cloth with alcohol or camera lens paper.
- Do not take apart or modify the equipment. Fire or electrical shock may result.
- In the unlikely event that you hear unusual noise, see smoke, feel excessive heat or smell anything unusual, immediately unplug the power source and contact your retailer. Continued use may result in fires or electrical shock.
- Do not use flammable sprays near this equipment. Also do not spill water, liquids, or flammable liquids on the equipment. If fluids enter this equipment and contact the electrical parts, fires or electrical shock may result. If anything enters the equipment, immediately unplug the power supply and contact your retailer.

 
## **Installation**

1. Carefully inspect your Laser Show equipment after you unpack it. If any damage is evident, such as dents or scratches on the covers or broken knobs, etc., immediately notify your carrier and your local sales distributor.
2. Hang up the equipment in a safe place. Ensure there are no barriers in front of the laser aperture.

## **Features of the product:**


1. Scanner system: 15K scanner
3. Working Modes: Sound Active, Auto run, DMX512 (11 CH), Master/slave mode
4. Interface: 3 pins XLR jack for DMX or Maser-Slave linking;
5. Input power: AC 100V~240V, 50/60Hz. Rated power: 15W.
6. Packing size: L\*W\*H=21.6\*16\*7cm; Weight: 1.5KG

**Front and Rear panel view:**

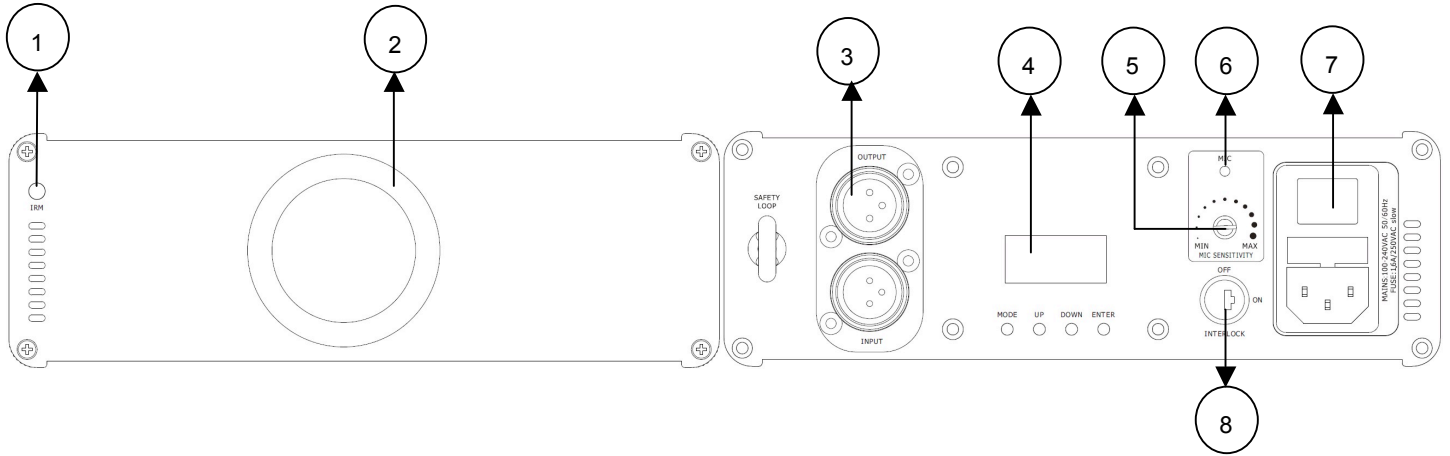

- 1. Remote signal receiving
- 2. Laser Aperture
- 3. DMX linking
- 4. LED function setting screen
- 5. Sound sensitivity knob
- 6. Microphone
- 7. Power jack and ON/OFF switch
- 8. Key lock

**LED FUNCTION SETTING**

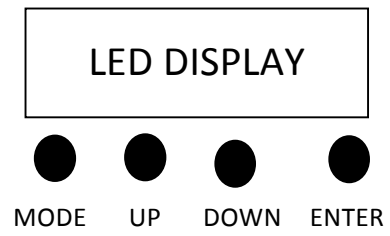 

Press "MODE" to choose functions.

In "d\*\*\*" mode, press "UP" or "DOWN" to select DMX address.

Press "ENTER" to save the current working mode or DMX address.


**Working mode**

 Display	Working mode	Description
AUTO	Auto running mode	Auto running program
SOUND	Sound active mode	Sound active running
d***	DMX mode	
SLAV	Slave mode	
OFF	Off	Turn off the machine

**Laser power of each model:**

200mW red laser@650nm, 50mW green laser@532nm, 150mW blue laser@447nm

**Remote control instruction:**

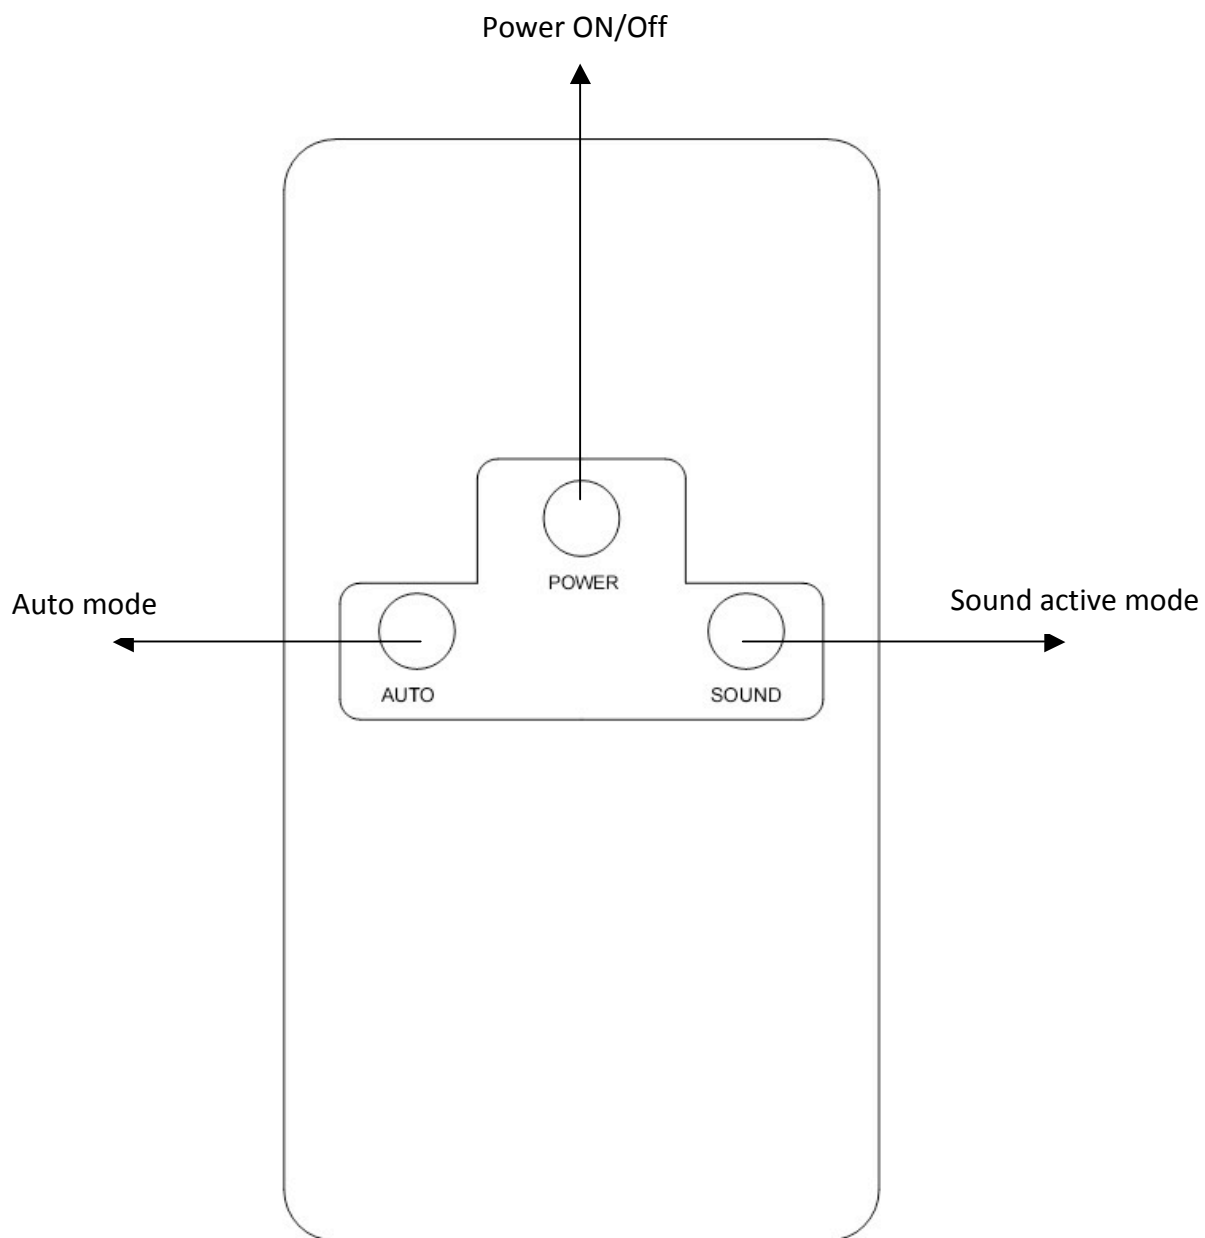

CH5	X axis moving	0~63	Manual adjust the horizontal movement
		64~255	Dynamic effect of horizontal moving, each 32 value for a different moving effect
CH6	Y axis moving	0~63	Manual adjust the vertical movement
		64~255	Dynamic effect of vertical moving, each 32 value for a different moving effect
CH7	Y rolling	0~63	Manual adjust the Y rolling
		64~255	Dynamic effect of Y rolling , each 32 value for a different rolling effect
CH8	X rolling	0~63	Manual adjust the X rolling
		64~255	Dynamic effect of X rolling , each 32 value for a different rolling effect
CH9	Drawing	0~127	Manual drawing
		128~255	Auto drawing from slow to fast
CH10	Scan speed	0~127	Choose sanning speed from slow to fast
	Display dot	128~255	The larger the value, the sharper the dot.
CH11	Color setting	0~127	Manual choose the color, each 16 value for a different color
		128-191	Every single color changing one by one automatically, from slow to fast
		192~255	Original pattern colors rolling change from slow to fast

## **TROUBLE SHOOTING**

 
1. If the power indicator is off and the laser doesn't work, please check the power supply and the input.
2. In Stand-Alone operation, if the power supply indicator is ON and sound active indicator is OFF, but the laser doesn't work.
  - A. Because sound is too small and cannot activate laser running, please increase the music volume or increase audio sensitivity on rear panel.
  - B. Please check if unit has been set up in slave mode, or DMX mode.
3. In Master-Slave operation, slave units don't function, please check as below.
  - A. Make sure there's only one master in the chain, and the others are set in slave mode.
  - B. Make sure to use a good quality power cable and XLR connector.
4. In DMX operation, the unit can't be controlled by the DMX console, but the DMX signal indicator is flashing, please make sure the DMX console and unit have the same channel.
5. If the output beam direction above is unusual, please restart the unit.
6. If the unit is fail, please turn off the unit, and then turn on again after 5 minutes.

After trying the above solution you still cannot sort out the problem, please contact your dealer or our company for service.

## Universal DMX Operation (DMX mode)

This mode allows you to use universal DMX-512 console to operate.

1. Install the units in a suitable position.
2. Use standard XLR cable to connect your units together via the XLR connector on the rear of the units. For longer cable we suggest a terminator at the last fixture.
3. Assign a DMX address to each the unit using dipswitches.
4. Turn on all units. Use DMX console to control your units.

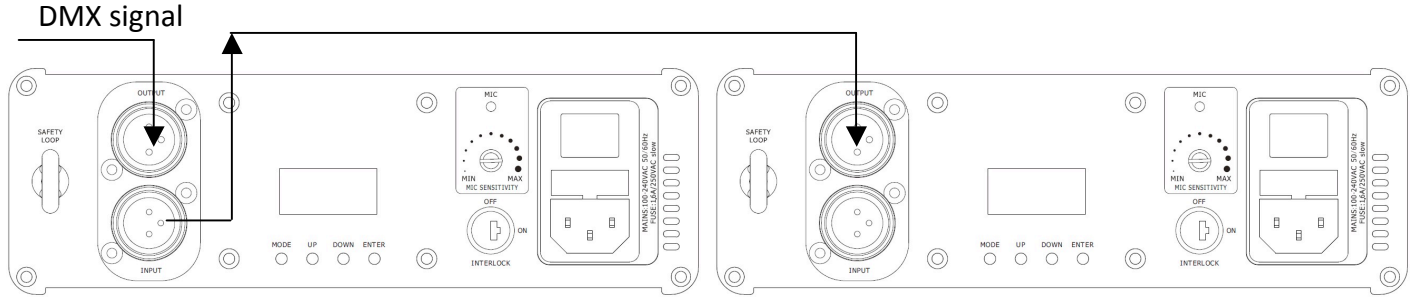

## Instruction for DMX channels

CH1	Mode select	0	Black out
		1~49	Manual mode, dynamic patterns running out-of-bounds; when the value is less than 5, the pattern size will shrink
		50~99	Manual mode, dynamic patterns running back-and-forth; when the value is less than 55, the pattern size will shrink.
		100~149	Manual and sound mode, dynamic patterns running out-of-bounds; when the value is less than 105, the pattern size will shrink.
		150~199	Manual and sound mode, dynamic patterns running back-and-forth; when the value is less than 155, the pattern size will shrink.
		200~229	Auto running each pattern (use CH2 to choose patterns)
		230~255	Sound mode each pattern (use CH2 to choose patterns)
CH2	Pattern select	0~127	Selecting built-in 127 patterns
		128~255	Random changing the patterns
CH3	Pattern size	0~63	Manual adjust the size, from large to small
		64~255	dynamic size effect, each 32 value for a different zooming effect
CH4	Rotation	0~63	Manual adjust the rotating position
		64~255	dynamic rotating effect, each 32 value for a different rotating effect

