
# **BSL IMPACT 6 LED EYE** USERS GUIDE

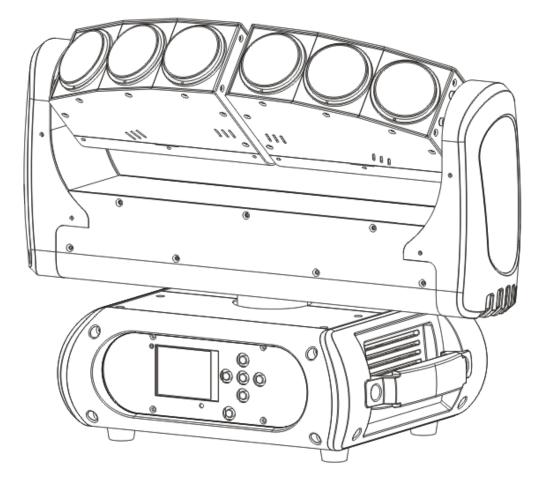

CE

## **1. Product Introduction:**

1.1 Before unpack the fixture, pls make sure that the packing is in good condition, following items will be found in the box:

- -The fixture
- -This users guide
- -3m DMX cable
- -1.5m power cable with powercon
- -Omega bracket for hanging installation
- -Safety chain

#### 1.2 Specification

#### Source

- Light source: 6\*20w white
- Lamp life: 60.000 hours
- Luminous Flux: 32000lux@2.5m@BEAM 620 single led
- Control: Remote on/off via DMX
- Ballast: switching mode power supply

#### Optical System

• Beam angle: 2.5°

#### X/Y

- Pan: 630° (2.8 sec) or 540°(2.0 sec), Tilt: 265° (1.8 sec)
- Creative design for two tilt rotation heads
- 16-bit resolution
- Auto repositioning

#### Features


- DMX channels: 15/18/14/17
- Full range 0-100% dimmer
- Hard-edge beam effect for white color leds
- Separate control of two heads
- Various strobe
- RDM function to change DMX address, display flip, X/Y Reverse and so on
- Software upgrade via DMX
- Hibernation when lost DMX for preset time
- Indicate temperature info of base, arm and lamp
- Fan speed auto change according to temperature


#### Display


- 2.4inch super nice LCD display with friendly English/ Chinese/French/Spanish menu
- Auto lock
- Flip
- Back-up communicating IC

#### 1.3 Description of the Device

- 1. Project lens
- 2. Head
- 3. Arm
- 4. Base
- 5. Display
- 6. Foot stand
- 7. Operation button
- 8. Handle

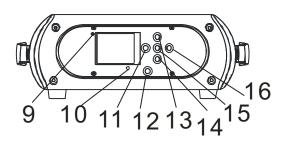

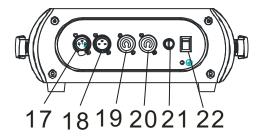

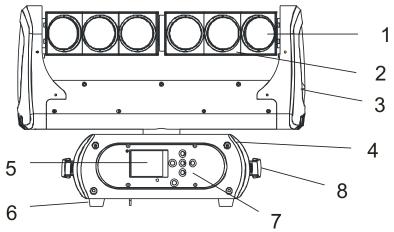

- 9. Wireless indicator
  10. Mic
  11. Left button
  12. Battery indicator
  13. Up button
  14. Down button
  15. Enter button
  16. Right button
  17. 3-pin DMX in
- 18. 3-pin DMX out
- 19. Powercon in
- 20. Powercon out
- 21. Fuse
- 22. Power switch

## 2. Safety and maintenance Information

2.1 Safety Info

2.1 Salety IIIO	
	Before operate this unit, please carefully read this users guide and keep if needed in future. It's necessary to respect following rules.
X	The disposal of the device after lifecycle could damage the environment, need to take it to special company for recycling or return to authorized dealer.
CE	The products referred to in this manual conform to the European Community Directives and are therefore marked with CE logo.
	Keep this device away from children and unauthorized users, the manufacturer will not take responsibility for the damage due to any disregard of the information provided in this manual and wrong operation.
	Before operate the device, pls make sure the fixture is in good housing, ensure pan and tilt can rotate in its complete range.
<b>□0.5m</b> ∎	Pls make sure minimal 0.5m distance need to kept between the fixture to any flammable material.

	The device can only run with 100-240v voltage, 50/60Hz power, don't connect to any other wrong power. Disconnect the device from main power before open the shield or maintenance.
	The device is designed only for indoor usage, pls keep it away from moisture. Do not expose the device under the sun or directly to any other lighting source.
	Never look directly into the projecting lens when the fixture is power on, the light may trigger epileptic seizures in photosensitive persons or persons with epilepsy. Especially at beam effect, extreme caution and observance of these safety instructions is mandatory.
	Don't put or install the device on a surface that subject to vibration or bumps.
<b>Ta=4</b> 5℃	The device is supposed to work in the temperate range -15° C and +45° C, do not use the device when the temperate exceed this range.
	The lens, shield need to be replaced when obviously broken, never use the device when the shield is not completed closed.
	Safety I class device, need to be earth connected.
	When the fixture is hanged overhead, the safety rope must be fixed to the bottom of the device to the appropriate fixing point.
	Always carry the device by the handles, do not take the head or arm directly for transportation.

#### 2.2 Maintenance

2.2.1 Operation only allowed to qualified person, damages due to unprofessional operation or remove of any parts inside will not be considered in warranty service. There are no serviceable parts inside the device or package, service only leaves to authorized dealers.

2.2.3 Never allow the optical components contact with oil, fat or any other liquid.

2.2.4 A regular clearance of the device is needed for long-term usage, this is very helpful to maintain the lifetime and brightness need to use a soft and lint-free cloth to clean the optical system, fan and air flowing tunnel.

#### 2.2.5. Trouble Shooting

Problems	Possible reasons	Checking or solutions
Device not power up	Powercon or power cable damaged	Change a good power cable to try
	Faulty power supply	Replace new power supply
Pan/Tilt error or vibrate	Faulty Pan/Tilt PCB	Replace PT001 PCB
	Faulty opto sensor	Replace opto sensor OP001
	Cable loosen	Check the cable connect to OP001
LED off	Temperature protection	Check the temperature from menu
	Fan not working	Check the fan speed info from menu
	Faulty LED	Replace new LED
	Dimmer and strobe set at 0	Set dimmer and strobe channel at 255
	Faulty power supply	Replace new power supply
Device not response to DMX	Faulty communication IC	Replace the IC with back-up one in the display PCB
	Faulty display PCB	Replace new display PCB
	Wrong DMX addressing	Check the address and setting
	Faulty DMX cable	Change to a good DMX cable

#### 2.2.6 Replacement of the fuse

Need to replace with same type and rating, which originally installed in the device.


Step One: Unplug power cable from main power.

Step Two: Unscrew the fuse holder out of the housing with a screwdriver.

Step Three: Remove the broken fuse and replace with an exact same type of new fuse.

Step Four: Insert the fuse holder back to the housing and screw tight and reconnect power.


## 3. Installation

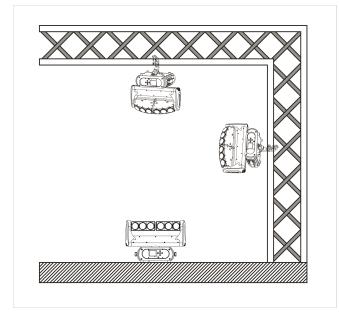


3.1 The device could be either put on a solid and even surface, or mounted upside down or sideways like left picture.

3.2 The mounting place must be sufficient stable and be able to support a weight of 10 times of the unit's weight. When the fixture is hanged, always additionally secure the device with the safety chain, fasten the safety rope at a suitable position so that the maximum fall of the projector will be 20 cm

#### 3.3 How to do mounting installation.

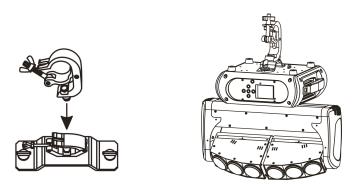

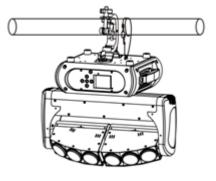

Step one: Installation the clamp onto the omega bracket;

Step two: Install the clamp and bracket on the bottom of panel, fasten the quick-locks;

Step three: Install the whole device onto appropriate truss and fasten the clamps, tight the safety rope with the truss or other fixing point at a suitable position that drop down distance not exceed 20 cm.

## 4. Control menu

4.1 Meaning of the icon in menu

CONNECT	LIGHT	INFOMATION	SET	PROGRAM
		¢	17	

#### 4.2 Menu tree

Default setting shadowed. Mark with ①can be basic reloaded, ② be program reloaded, ③can be private reloaded.

Conn ect	DMX Address①	ххх	DMX address setting	
Light	Max Temperature	temperat		Lamp off if temperature continuously over for 5 minutes
	Lamp Adjust $\textcircled{1}$	PAN	Adjust value of channel	
	Time Info.	Current XXXX(Hou	rs)	Fixture boot time
		Fixture Life XXXX(Hours	Fixture total run time	
	Temperature	Near Lamp Temp (depe	nds on fixture)	Temperature Sensors
ior	Fans Speed	Near Lamp Fan (depend	ls on fixture)	Fan speed Sensors
nat	Channel Value	PAN		Display value of
orn				channel
Information	Error Message	Pan,Tilt		Error channels
	Fixture Model	xxxxxxxxxxx		Display model brand
				and model
	Software Ver	1U01 V1.0.00		Version of each IC
	Reset	All		Reset all
		Pan&Tilt	Reset Pan&Tilt	
	Movement	Pan Reverse $\textcircled{1}$	ON/OFF	Pan Reverse
		Tilt Reverse $(1)$	ON/OFF	Tilt Reverse
		Pan Degree $(1)$	630/540	Choose Pan Degree
		Encoders(1)	ON/OFF	Encoder wheel on/off
		Pan/Tilt Mode①	Stand/Smooth	Choose pan/tilt mode
	UI Set	Mic Sens. ③	0~99%, <mark>60%</mark>	Sensitivity of Mic
		No Signal①	Close/Hold/Auto/Music	Mode when no signal
		Temperature. C/F $(1)$	Fahrenheit /Celsius	Temperature at $^{\circ}C/^{\circ}F$
Set		Fans Mode①	Auto Speed /High Speed	Fans mode
0		Hibernation ①	OFF, 01M~99M,15M	Sleeping mode
		Backlight(1)	02~60m 02m	Show backlight time
		Flip Display①	ON/OFF	Display 180 $^\circ$ reverse
		Display Bright③	00~31 10	Display Brightness
		Brand Show①	ON/OFF	Show brand or not
		Key Lock①	ON/OFF	Key lock on/off
		Language <sup>③</sup>	En/简/繁/Fr/Sp	Language Select
	Users	User Mode $\textcircled{1}$	Standard	Standard mode
			Extended	Extended mode
			Basic-8bit	Basic-8bit mode

				Basic-16	bit	Basic-16bit mode	
				User		User program mode	
		Edit User③		Max Cha	annel = XX	Edit users mode	
		Luit Oser		PAN = C		Luit users mode	
				• •	HUI		
	Calibration <sup>3</sup>	-Password-		- =XXX		Password: 050	
		Color		=XXX		Calibrate channel value	
						Calibrate channel value	
		• Name		:		Nama	
	Fixture ID③	Name				Name	
		-Password-				Password: 050	
		PID Code				Set PID of RDM	
	Reload Default	Basic Reload(①)		ON/OFF		Basic Reload	
		Program Reload(	2)	ON/OFF		Program Reload	
		Password	<b>``</b>	XXX ON/OFF ON/OFF		Password: 050	
		Private Reload(3	))			Private Reload	
		All Reload				All Reload	
	Play(1)	Slave Receive Slave		Slave Receive 1,2,3		DMX Receive	
						Choose slave position	
		•		r / Alone		Run Sequence	
		Music		er / Alone		Music mode	
	Select Chase <sup>2</sup>	Chase Part 1			Select and run auto		
		Chase Part 2		se 1 ~ 8 Chase 2		program	
		Chase Part 3	Chase 1 ~ 8 Chase 3		ase 3		
Е	Edit Chase②	Chase 1	Chase	Test		Test	
gra		:	Step 0	1	=SCxxx	Beginning scene	
Program		Chase 8	Step 6	4	=SCxxx	Ending scene	
Ч	Edit Scenes②	Edit Scene 001	Pan,Ti	lt,	=xxx	Input manual scene	
		~ Edit Scene	Fade	Time	=xxx	Modify manually fading	
		250	Secn	e Time	=xxx	time	
			DMX I	nput		Modify manually scene	
						time	
						Input scene from	
						exterior controller	
	Scenes Record	ScXX=>ScXX				Auto Input scenes	


#### 5. DMX connection and DMX protocol

#### 5.1 DMX addressing:


5.1.1 The device is controlled by universal DMX 512 protocol, DMX address is the start channel used to receive instructions from the external controller. For independent control, each fixture must be assigned its unique address control channels. For example, this device has four channel modes: 15/18/14/17, if we set the mode at standard 21 channels mode, and there are several models need to be independently controlled, we just simply address first fixture at 1, and second fixture at 36, third one at 51, etc.

If the devices have the same address, they will behave synchronically.

DMX addressing is limited, don't set the address so high that without enough control channels for the fixtures. Display is flashing when no DMX signal is received.

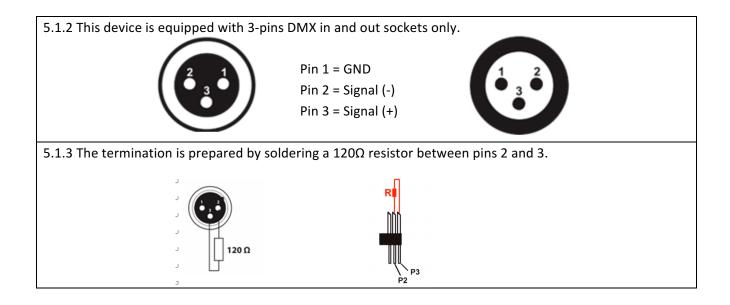

5.1.4 Connection: us DMX cable with 3-pin XLR-plugs to connect the controller with the fixture or one fixture with another.

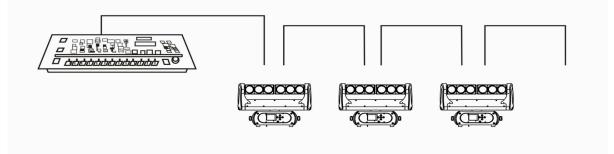

#### 5.2 DMX chart

Channel		name	function	Min	Max						
St	Ex	Ba1	Ba2			DMX	DMX				
1	1	1	1	Pan	Pan Coarse	0	255				
	2		2	Pan fine	Pan Fine	0	255				
2	3	2	3	Tilt	Tilt Coarse	0	255				
	4		4	Tilt fine	Tilt Fine	0	255				
3	5	3	5	Tilt	Tilt Coarse	0	255				
	6		6	Tilt fine	Tilt Fine	0	255				
4	7	4	7	Movement	fastest to Slowest	0	255				
				Speed	Normal	0	15				
				Mariana		-					
5	8	5	8	Movement	Movement With Blackout	16	31				
							Fu Fu	Function	All Tilt Movement	32	47
					TBD	48	255				
					Normal Shutter Functions	0	15				
6	9			Shutter	Pulse-effect Forward	16	31				
0	9			Function	Pulse-effect Reverse	32	47				
					Random Strobe	48	63				

					Effect	64	95
					ТВО	96	255
					Normal Shutter Functions		
					Close	0	31
					Strobe Rate (slow to fast)	32	223
					Open	224	255
					Pulse-effect Forward		
					Close	0	31
					Strobe Rate (slow to fast)	32	223
					Open	224	255
					Pulse-effect Reverse		
7	10			Shutter	Close	0	31
<b>'</b>	10			Shutter	Strobe Rate (slow to fast)	32	223
					Open	224	255
					Random Strobe		
					Close	0	31
					Strobe Rate (slow to fast)	32	223
					Open	224	255
					Effect		
					Close	0	31
					Effect Speed (slow to fast)	32	223
					Open	224	255
					Shutter closed	0	31
					Effect 1 slow to fast	32	47
					Effect 2 slow to fast	48	63
					Strobe effect slow to fast	64	95
		-	-		Effect 3 slow to fast	96	111
		6	9	Shutter	Effect 4 slow to fast	112	127
					Pulse-effect in sequences	128	159
					Effect 5 slow to fast	160	175
					Effect 6 slow to fast	176	191
					Random strobe effect slow to fast	192	223
0	11	7	10	Dimmer	No function (shutter open) Dimmer(Close to Open)	224	255
8 9	11	/ 8	10 11	White 1	White 0->100%	0	255 255
9 10	12	8 9	11	White 2	White 0->100%	0	255
10	13	9 10	12	White 3	White 0->100%	0	255
11	14	10	13	White 4	White 0->100%	0	255
12	15	11	14	White 5	White 0->100%	0	255
14	10	13	16	White 6	White 0->100%	0	255
<u> </u>		15	10		Normal	0	7
					Reset All	8	15
					Pan&Tilt Reset	16	23
15	18	14	17	Control	TBD	24	31
					ТВО	32	39
					ТВО	40	47
1					ТВО	48	55

Display Off	56	63
Display On	64	71
TBD	72	79
TBD	80	87
Hibernation	88	95
TBD	96	255

### 6. Unique Features

6.1 RDM, stand for "Remote Device Management", with this function, users can realize remote control of the device, such as remotely changing DMX address, reverse pan/tilt setting, check a lot of useful information such as temperature, power consumption, fan speed. Etc. Every single device has a unique RDM code before left factory to distinguish from each other, usually not suggest users change this code freely.


6.2 Software upgrade function via DMX cable, if there is any new firmware for this device come out, it can be upgraded simply via a software upgrade box, no need to change any mechanical parts. The upgrade box is not included in the package, if need any further assistance pls just contact authorized dealers.


6.3 Hibernation, the device will enter sleeping mode if activated after a period of disconnecting DMX signal to save the power consumption, and will return immediately as soon as the DMX signal is sent again.


6.4 Display back-up communication IC, there is a back-up communication IC installed in the display PCB, so users could replace at once if the working one is broken, no need to wait long time from service.

6.5 Display flip, by press up and down button for more than 3 seconds, the display will flip automatically, this function is useful to read menu conveniently when device is hanged.

## 8. Dimensions Drawing

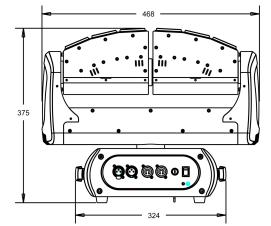

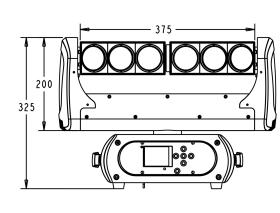

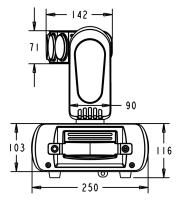

## 9. Technical specification

Power supply	100-240 V AC, 50/60 Hz ~
Power consumption	206W
LED	6*20w white
DMX channels	15/18/14/17 modes
Beam angle	2.5°
Luminous flux	32000lux@2.5m
Fuse	T 3.15 A, 250 V
Device dimensions	468x250x375mm
Net Weight	10KG